


Dado Installation Instructions

1. Mount the Alu channel

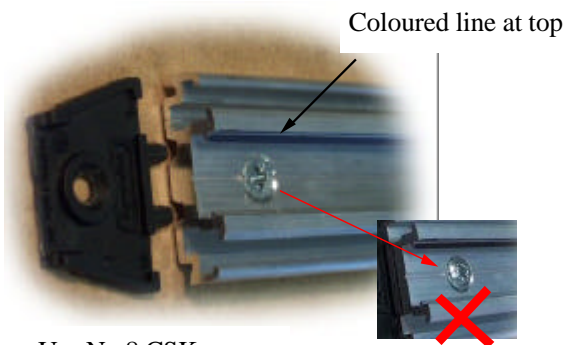


Use No.8 CSK screws
(not raised head)

2. Mount the end-piece base




Engage tabs into channel. Break off end wall if not needed

3. Insert the switch from front

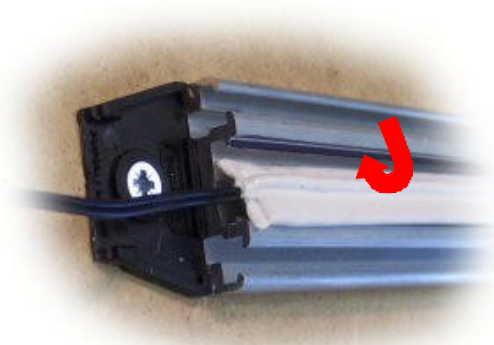


Hook switch under top retaining lip

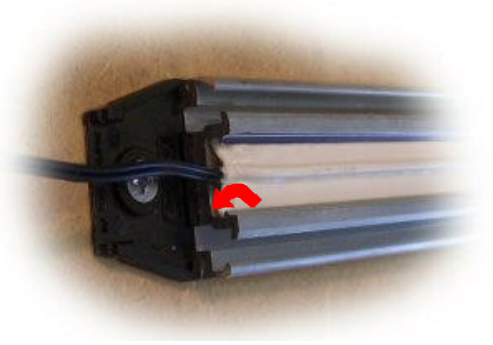


Lift switch over bottom retaining lip

To remove the switch, carefully carry out the reverse of the above

4. Mount the top cover

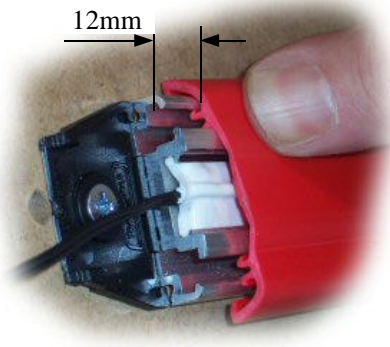


Engage top and bottom clip profile into channel

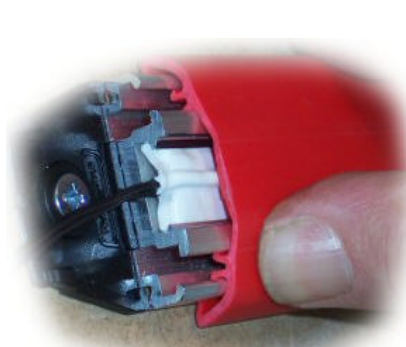

Clip ends of cover under channel ends

5. Mount end caps

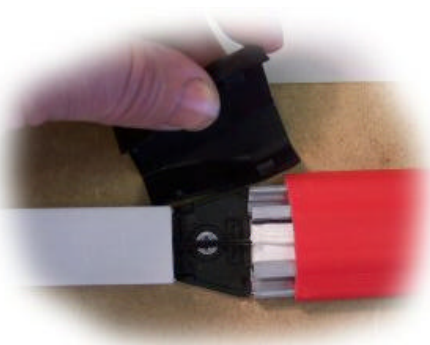

Clip on end cap engaging raised bosses into recesses



Assembly complete